MISUTONIDA
italian style accessories 4x4

# FIAT FIORINO



**Item Code**

**Codice Articolo** : PP1/239/IX

*Réference Article*

**GB**

STAINLESS STEEL
REAR PROTECTIONS

**ITA**


**PROTEZIONE POSTERIORI
IN ACCIAIO INOX**


**FR**

***PROTECTIONS POSTERIEURES
EN ACCIER INOX***

# FIAT FIORINO

| Part List<br>**Lista della bulloneria**<br>*Liste des piéces* | | |
|---|---|---|
| **A** |  | **TE 6X25**<br>**x 4** |
| **B** |  | **Ø 6**<br>Big<br>**Grandi**<br>***Gorand***<br>**x 6** |
| **C** |  | **Ø 6**<br>**x 4** |
| **D** |  | **M6**<br>**x 4** |

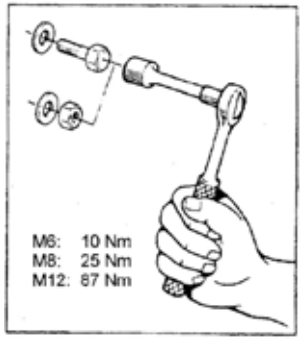

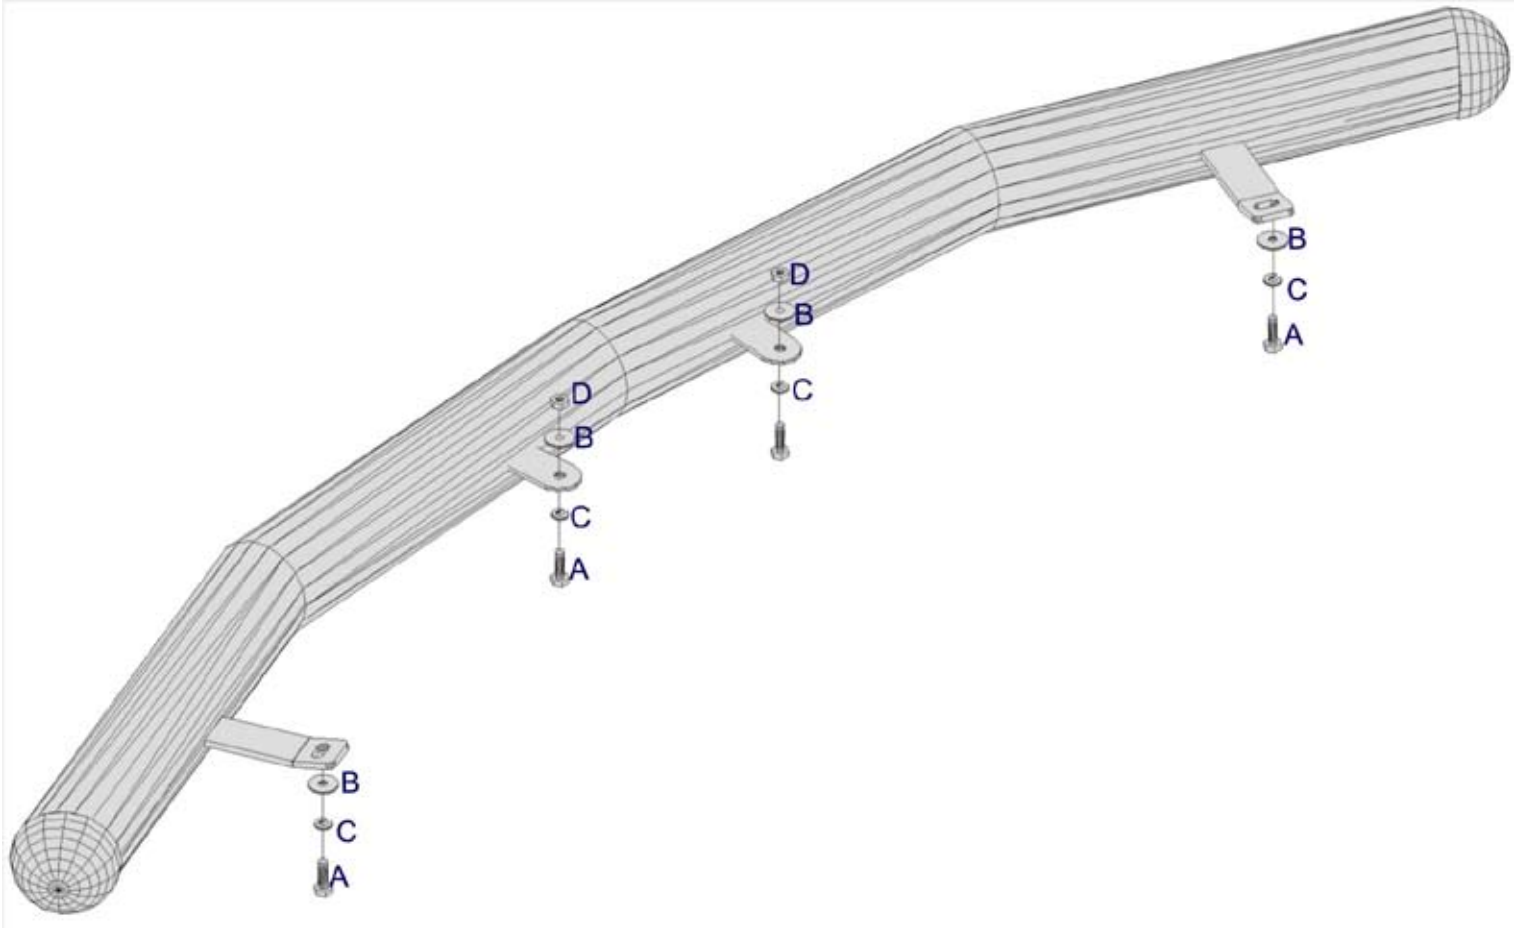
MISUTONIDA
italian style accessories 4x4

## GB

## FITTING INSTRUCTIONS

1. Remove the n.2 original bolts located in the lower part of the bumper ( picture 1).

2. Fit the longer brackets welded to the accessory in the holes just freed (picture 2) using A,B,C (picture 3).

3. Drill a hole in correspondence of the ones located on the shorter welded brackets.

4. To fit more tightly the accessory fit the welded brackets to the bumper using A,B,C,D.

5. Tighten all the set of bolts.

## ITA

## ISTRUZIONI DI MONTAGGIO

**1. Rimuovere i 2 bulloni originali posti nella parte inferiore del paraurti posteriore (foto 1).**

**2. Montare le staffe saldate piu lunghe nei fori appena liberati (foto 2) utilizzando A,B,C (foto 3).**

**3. Praticare un foro in corrispondenza di quelli presenti sulle staffe saldate piu corte.**

**4. Per un ulteriore fissaggio dell'accessorio fissare le staffe saldate al paraurti utilizzando A,B,C,D.**

**5. Serrare tutti i bulloni.**

## FR

## *INSTRUCTIONS DE MONTAGE*


***1. Enlever les n.2 boulons originales qui se trouvent dans la partie inférieure du parechoc (photo 1).***

***2. Monter les pattes de fixation plus longues saudées à l'accessoire dans les trous libérés (photo 2) en utilisant A,B,C (photo 3).***

***3. Faire des trous en correspondence des ceux qui se trouvent sûr les pattes de fixation saudées plus courtes.***


***4. Pour mieux monter l'accessoire fixer les pattes saudées au parechoc en utilisant A,B,C,D.***


***5. Serrer toute la boulonnerie.***

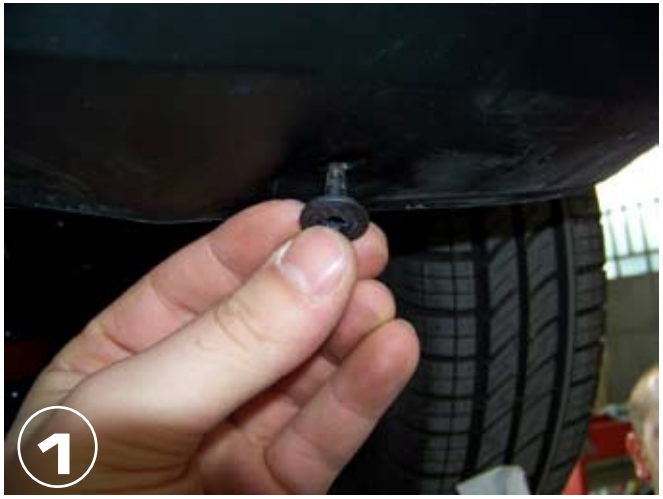





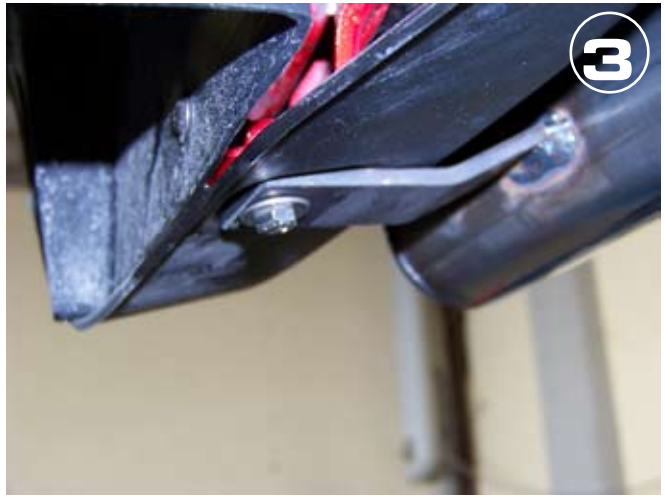

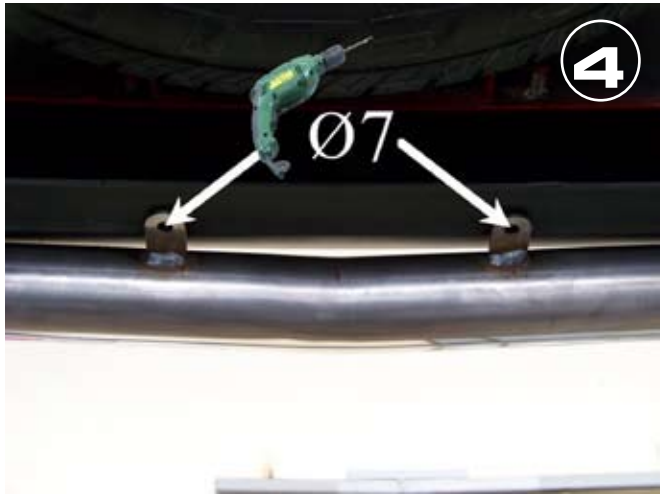



| **Date**<br>**Data**<br>*Date* | Item Code<br>**Cod.Articolo**<br>*Réf. Article* | **Vehicle model**<br>**Modello Veicolo**<br>*Modèle de Voiture* |
|---|---|---|
| ***16/03/09*** | ***PP1/239/IX*** | ***FIAT FIORINO*** |

Document checked and approved by
**Documento controllato ed approvato da**
*Document controlé et approuvé par*

***Botta Pietro***

MISUTONIDA italian style accessories 4x4