MISUTONIDA
italian style accessories 4x4

SUBARU FORESTER '08



Item Code

Codice Articolo : PP1/220/IX

Réference Article

GB

STAINLESS STEEL
REAR PROTECTION

ITA


**PROTEZIONE POSTERIORE
IN ACCIAIO INOX**

FR

***PROTECTION POSTERIEURE
EN ACCIER INOX***

SUBARU FORESTER '08

Part List **Lista della bulloneria** *Liste des piéces*	
A	**TE 8X30** **x 2**
B	**Ø 8** **x 2**
C	**Ø 8** **x 2**
D	**M8** **x 2**
E	**PP1/220/B** **x 2**

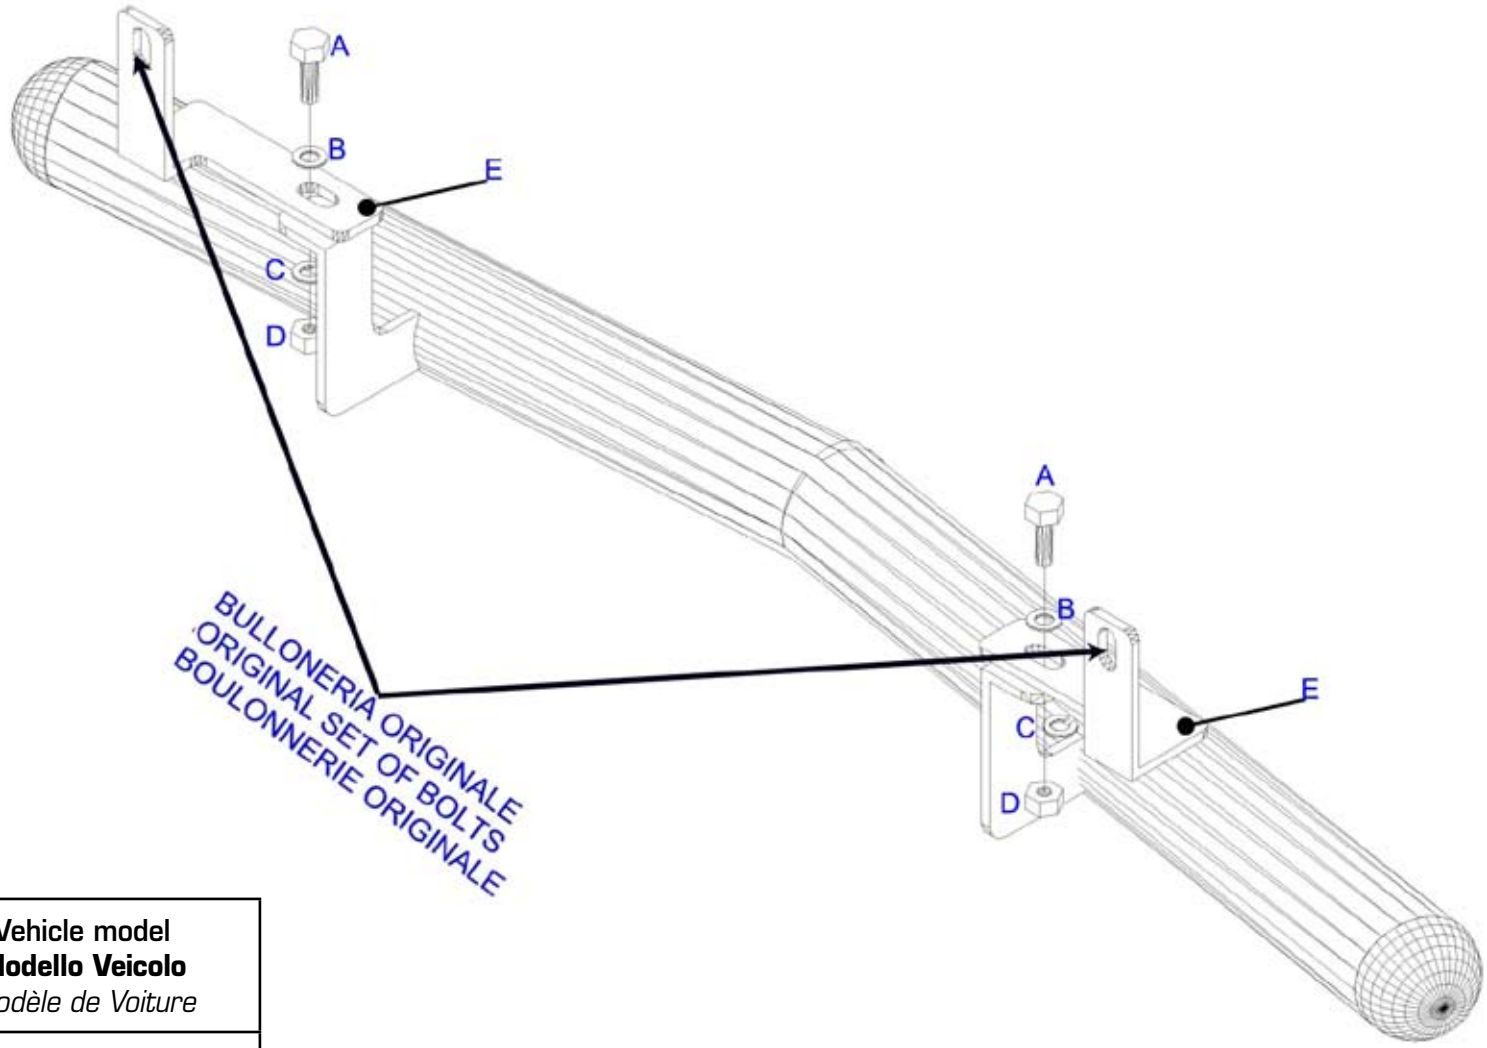

Date **Data** *Date*	Item Code **Cod.Articolo** *Réf. Article*	**Vehicle model** **Modello Veicolo** *Modèle de Voiture*
05/05/08	***PP1/220/IX***	***FORESTER' 08***

Checked and approved by
Controllato ed approvato da
Controlé et approuvé par

Botta Pietro

MISUTONIDA italian style accessories 4x4

GB

FITTING INSTRUCTIONS

1. Remove the n.2 plastic rivets present in the rear part of the rear bumper.

2. Fit E as shown in picture 1 using the original set of bolts.

3. Insert A in the hole present on the E bracket as shown in picture 2.

4. Fit the brackets welded to the accessory on E using B,C,D.

5. Tighten all the set of bolts.

ITA

ISTRUZIONI DI MONTAGGIO

1. Rimuovere numero 2 rivetti in plastica presenti nella parte posteriore del paraurti.

2. Montare E come indicato in foto 1 utilizzando la bulloneria originale.

3. Inserire A nel foro presente nella staffa E come indicato in foto 2.

4. Montare le staffe saldate all'accessorio su E utilizzando B,C,D.

5. Serrare tutta la bulloneria.

FR

INSTRUCTIONS DE MONTAGE

1. Enlever les n.2 rivets en plastique présents dans la côté posterieure du parechoc arrière.

2. Monter E comme indiqué dans la photo 1 en utilisant la boulonnerie orignale.

3. Insérer A dans le trou present sûr la patte de fixation E comme indiqué en photo 2.

4. Monter les pattes de fixation saudées à l'accessoire sûr E en utilisant B,C,D.

5. Serrer toute la boulonnerie.





