
TOYOTA LAND CRUISER 120 5P/DOORS 03/06

MISUTONIDA s.r.l. - 12062 CHERASCO (CN) - Via Fondovalle n° 3
Tel. 0172-489283 - Fax 0172-488381
Web Site: http://www.misutonida.com - E-mail: misutonida@misutonida.com

*IN ORDER TO FIT THE **S/138P/DS** BRACKET (REAR DRIVER SIDE) IT IS NECESSARY TO UNSCREW THE BOLT THAT HOLDS THE BRAKES PIPES AND INSERT THE **S/138P/DS** BRACKET AND **C/138P/DS** CLOSING ON WHICH THE GRAND PEDANA HAS TO BE FITTED.*

PER IL MONTAGGIO DEL SUPPORTO **S/138P/DS** (LATO GUIDA-PARTE POSTERIORE) OCCORRE SVITARE IL BULLONE SU CUI SONO FISSATI I TUBI DEI FRENI, QUINDI INSERIRE IL SUPPORTO **S/138P/DS** E LA RELATIVA CHIUSURA **C/138P/DS** SUI QUALI MONTARE LA PEDANA.

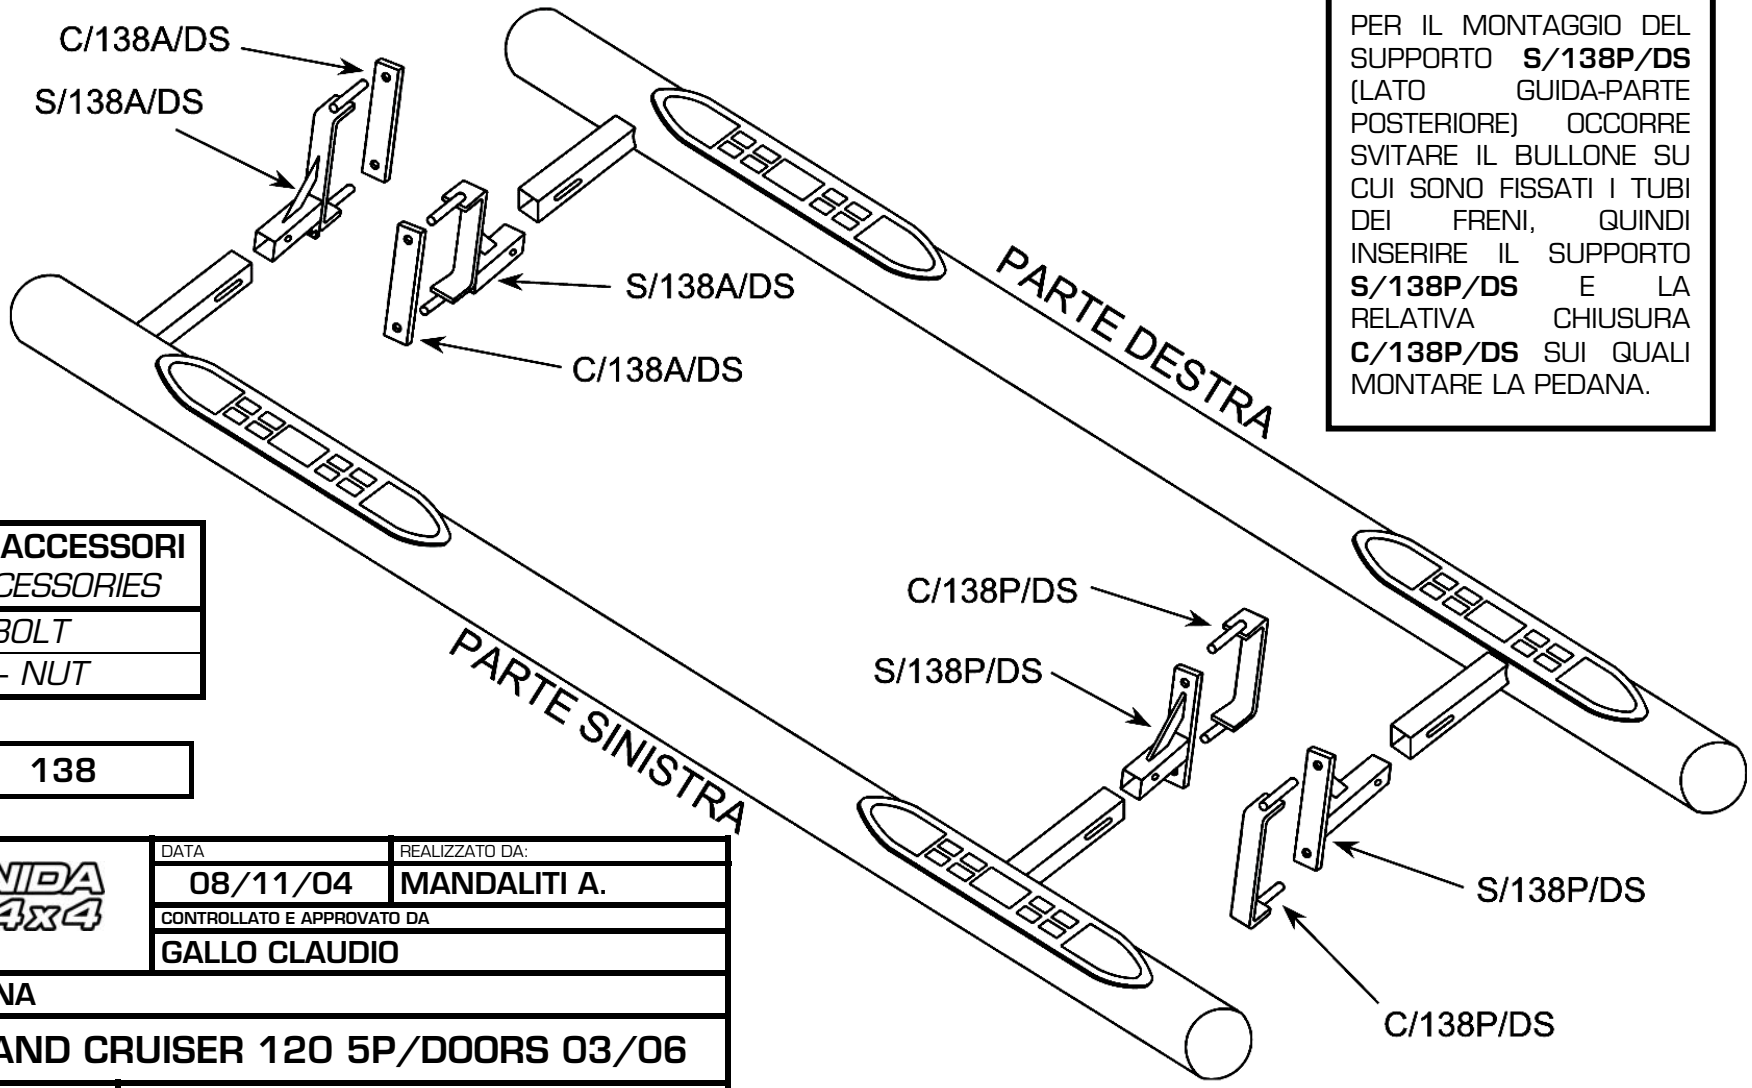

BULLONERIA ED ACCESSORI *BOLTS AND ACCESSORIES*	
4	TE 10 x 50 - *BOLT*
10	M10 AUTOB. - *NUT*

CODICE KIT	**138**

	DATA	REALIZZATO DA:
	08/11/04	**MANDALITI A.**
	CONTROLLATO E APPROVATO DA	
	GALLO CLAUDIO	
OGGETTO: *OBJECT:*	**GRAN PEDANA**	
	TOYOTA LAND CRUISER 120 5P/DOORS 03/06	
ARTICOLO: *ITEM:*	**GP/138/IX**	**Versione acciaio INOX AISI 304** Stainless steel AISI 304 version